pelouze®

ELECTRONIC WEIGHING INSTRUMENT

OPERATOR'S MANUAL

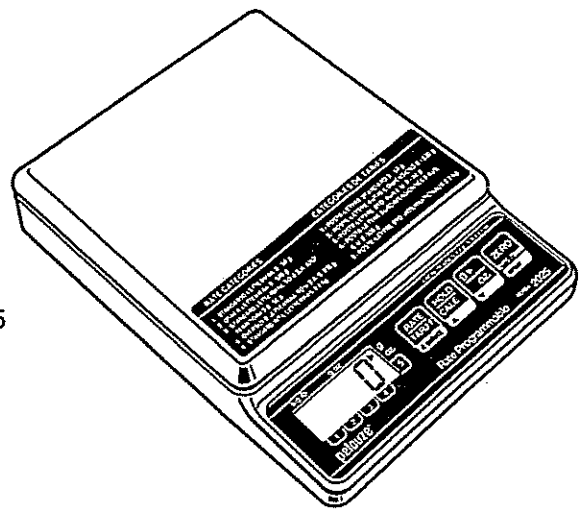

MODEL NO. 5055
Capacity 2200 g

Envelopes/Small Packages

Please take a few minutes to read Operator's Manual so that you can become acquainted with the proper usage and special features of your **PELOUZE DIGITAL SCALE.**

use
PESRP cal
inst.

OPERATING INSTRUCTIONS

- **PRESS "ZERO"** TO RETURN DISPLAY TO "0" g BEFORE EACH WEIGHING AND BEFORE PLACING MATERIAL ON PLATFORM.
- **PRESS "ON"** Display will briefly show 5055 followed by "[An" and the "0" g.
- Arrow in readout moves to desired mode indicated on platform label. **PRESS "RATE"** until desired rate mode is indicated. When using adapter, if display fluctuates between "----" and numbers, reverse adapter, in wall outlet. Note: After Scale has been turned off and then again turned on, display will always return to "0" in gram mode. **PRESS "OFF"** to turn off scale.

RATE PROGRAMMING INSTRUCTIONS

ENTERING RATE PROGRAMING MODE.

1 Obtain the current canadian rate chart.

2 With scale off, press and hold down the **"enter"** key. Then turn scale on using the rocker switch. Hold down the **"enter"** key until **"UPdt"** appears in the display. Your are now in the rate programming mode.

SELECTING A RATE TABLE.

3 The display now reads **"SELt"**. Use the **"select"** key to select which rate category you wish to update. Press **"enter"** to enter your selection.

UPDATING THE RATE/WEIGHT TABLE.

4 The heaviest of the rate category selected will appear in the display. Notice that the far right number is flashing. Refer to the new rate chart to determine if the top weight in this rate category has changed. If the new top weight is different, use the "▲" and "▼" keys to change the value of the number, higher or lower, respectively ("Hold the keys down to quickly scroll the value). Press **"enter"** when the proper top weight value is reached.

5 The weight value of the first rate will appear in the display. Check this weight with your new rate chart. If it is different, follow the procedure described in **Step 3** to change the weight to its proper value. Press **"enter"** to enter the weight.

6 The old rate will appear in the display. Use the same procedure as before to change the value. Press **"enter"** to enter the rate.

7 The second weight of the rate category will appear in the display. Continue updating the rest of the rate table as described in **Steps 4 & 5.** When the last rate is entered **"End"** will briefly appear in the display, followed by **"SELt"**. You may now select a different rate category to update, or, turn the scale off.

These instructions are also located on the bottom of your scale.

ERROR MESSAGES

Err 1 = Indicates 0 (zero) has been entered as a rate value. The scale will not accept this. Check the rate value and try again.

Err 2 = Indicates a weight value has been entered that is greater than the top weight value. Check the weight value and try again.

HOLD feature "Locks In" the weight of a large package or envelope when display is obscured during weighing. When the HOLD feature is enabled, package or letter weight remains displayed for an additional 3-5 seconds after package/envelope removal.

To activate HOLD mode:
PRESS HOLD/CALE button until Hold APPEARS in display.

To deactivate HOLD mode:
PRESS HOLD/CALE button until "disH" APPEARS in display.

Pelouze Scale Co.
a subsidiary of **Healthometer, Inc.**
7400 West 100th Place
Bridgeview, IL 60455.

Made in USA

Pelouze is a registered trademark of Pelouze Scale Co.

12.93 31789
© 1993 Pelouze Scale Co.

Thank you for selecting a Pelouze electronic weighing instrument. With proper care and usage, its load cell technology should provide you with trouble-free service. We know you will be happy with your selection. Its outstanding quality and dependability are backed by the reputation Pelouze has earned since 1894!

GENERAL INFORMATION

- Model 5055 operates on one 9V Battery or 110V AC Adapter Output: 9V DC 100mA.
- If using battery: Battery compartment is located on underside of Scale. Connect Battery ±, accordingly.
- If using adapter: First plug into rear of Scale, then into wall outlet.
- Peel off protective plastic foil on display. Place scale on a vibration free, level surface.
- A replacement postal chip can be purchased from your dealer whenever postal rates change, or you can program Model 5055 yourself! See Programming Instructions.
  Note: If you prefer not to program your scale, you may purchase a rate chip. Please call Pelouze at 800-654-8330.

FEATURES

AUTOMATIC OFF: Scale will automatically turn off after approximately 30 seconds of inactivity (no weight change). This prolongs Battery life.
To deactivate Automatic Off: While scale is off, PRESS and hold "g/oz". While still holding "g/oz" PRESS "I" on switch located on right side of scale until "SHoF" appears in display.
To reactivate automatic Off: PRESS "0" to turn off SCALE. When scale is again turned on. Automatic Off will again apply.
OVERLOAD WARNING: Flashing "Help" indicates you have exceeded scale capacity.
LOW BATTERY WARNING: Flashing "bAtt" appearing in display indicates low battery.

ZERO ADJUST (TARE): "ZERO" is used to return display to zero. "ZERO" is also used to "TARE" or offset weight: Place empty container on Scale. PRESS "ZERO". Place material to be weighed in container. Display will show NET WEIGHT of material in container. PRESS "ZERO" each time additional material is added to container. (Total not to exceed 2.2 kg capacity of Scale.)
NEGATIVE WEIGHT ACCUMULATOR: Stores value for "TARE" weights. When container is removed from scale platform, the accumulated tare value is displayed with a "—" sign in front. Press ZERO to clear display.

PLATFORM LABEL

RATE CATEGORIES
1 - STANDARD LETTERMAIL 0-50 g
2 - OTHER LETTERMAIL 0-500 g
3 - STANDARD LETTERMAIL TO U.S.A. AND TERRITORIES 0-50 g
4 - OVERSIZED LETTERMAIL TO U.S.A. 0-500 g
5 - STANDARD INT'L LETTERMAIL 0-2 kg